

# Cleaning Instructions

## Daily Cleaning

uri**CLEAN**

Art.Nr. 618 728 050



uridan can be cleaned very simply with the aid of **uriCLEAN**. Simply spray the urinal surface with **uriCLEAN** and the lotus effect prevents any adhesion of urine drops, causing them to simply roll off.



In high traffic amenities, we recommend cleaning the urinal several times a day.

## Refilling

uri**LOCK**

Art.Nr. 618 729 030




Our especially developed biodegradable blocking fluid **uriLOCK** ensures that your uridan urinal remains completely odourless, operating without the need for costly sealants or chemical additives.



Please use **uriSTRONG** or **uriTABS** deep cleaner to ensure your urinal works smoothly.



1 Spray **uriCLEAN** daily on the cover and surface of the urinal.

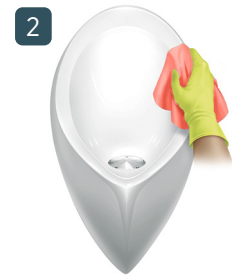

2 Polish the outer and inner surface of the urinal with the **uriCLOTH** cleaning cloth.



### Every 2 Weeks

Remove the cover and clean the urinal opening and cover with a brush.



Pour **uriLOCK** (300 ml) blocking fluid directly over the cover.

Refill after 15,000 uses or **latest after 3 months**.

# Cleaning Instructions

## Deep Cleaner

**uriSTRONG**

Art.Nr. 618 730 031

**uriTABS**

Art.Nr. 618 730 032



Deep cleaner is ideal for heavy and persistent dirt and deposits in sanitary areas and also removes lime and urine scale.

Recommended application is 4 times per year.



Do not pour **uriSTRONG** over the cover!



DOWNLOAD



Lift cover with suction device.



Pour 200 ml of **uriSTRONG** or one **uriTABS** tablet directly into the urinal and let it sit for **5 to 15 minutes**.\*

\*In case of heavy soiling and blockages leave **uriSTRONG/uriTABS** over night!




Flush (fast pour) with 5 litres of warm water to ensure waste trap clears.



Clean the inside of the waste trap and urinal opening with a brush.



Flush again with water.

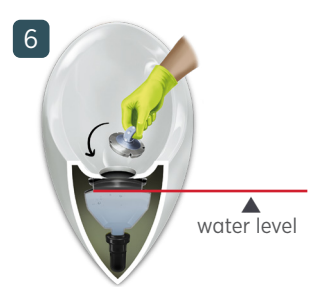

Fill the water to the point of overflow and insert the cover.



Pour **uriLOCK** (300 ml) blocking fluid over the cover.