


Parts List | Lieferumfang

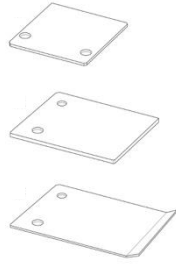


4 x screws fitting No. 8
4 x Schrauben Beschlag Nr. 8

2 x fitting No. 8
2 x Beschlag Nr. 8

SPINNAKER GTW

glass fibre reinforced plastic (GFP) | glasfaserverstärkter Kunststoff (GFK)

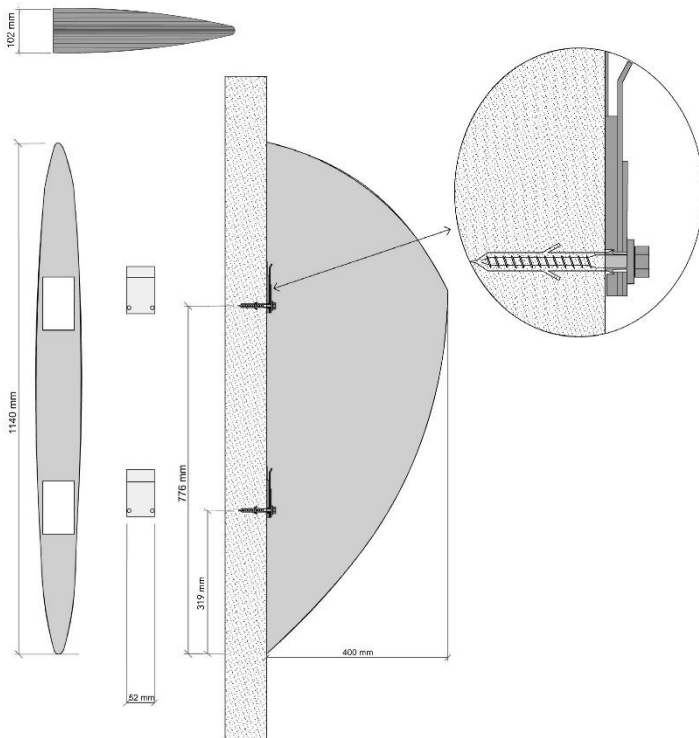

EN

1. The partition wall is mounted with 2 brackets by using 2x2 pc. 8x60 mm screws.
2. The lower edge of the partition wall should be positioned on the level of the lower edge of the urinal. The usual distance between two urinals is 600 mm, this uridan partition wall should be installed between two urinals.
3. After mounting, apply silicon sealant around outer edge of the wall.
4. The included components and screws for mounting the partition to a solid wall. For all other wall types, appropriate fixtures should be used.

DE

1. Die Trennwand wird auf 2 Beschläge aufgesetzt, die mit je 2 Stück 8x60 mm Schrauben an der Wand nach der Maßskizze angeschraubt wird.
2. Wenn diese beiden Beschläge montiert sind, die Trennwand mit beiden Montagehohlräumen über die Beschläge halten und herunterdrücken.
3. Silikonfuge zwischen Wand und Trennwand legen. Urinale werden normalerweise mit einem Abstand von 600 mm, Mitte Urinal zu Mitte Urinal, montiert. Trennwand genau an die Mitte zwischen den Urinalen montieren.
4. Bei korrekter Montage ist die Unterkante der Trennwand auf der gleichen Höhe wie die Unterkante der Urinale.
5. Die mitgelieferten Schrauben und Dübel sind zur Montage in festem Mauerwerk geeignet. Für andere Wandmaterialien müssen vor Ort andere Lösungen gefunden werden.